 


ADS-1410 Instruction



1. 3 buttons : a. Adjusting b. Selection c. Function (Rear panel)
2. Function : if users want to inquire original setting value, press key about 3 sec. then enter the 1st option, if you don't change numerical value, can see the original setting value continuously, and it will recover normal screen on 7th time .
- B. Selection : under 'Function mode' can enter 'Adjust mode', the highest digit can start flashing, then match up ' key to modify numerals, then use key to move digits, the 3rd digit goes to the 2nd digit....1st digit, then come into next function/ adjustment .
- C. Adjusting : this key for being selected regulative digit, press this key can accumulate figures, till the number you want

Function Option

1. HS= set up to show highest value + /-00.00-99.99
2. LS= set up to show minimum value + /-00.00-99.99
3. RH= HI output set up + /-00.00-99.99
4. RH= LO output set up + /-00.00-99.99
5. dq = decimal point sets up 4.3.2.1.
5. dt = renew time set up 0 ~ 9 second
6. OF= zero excursion numerical value sets up + /-0.00
7. bu = baud rate 0 ~ 4
8. id = display address 00~99

Step	Operating	Screen	Switch Screen	Remark
1-1	Press <i>function key</i> For 2 seconds	HS	- 80.0	
1-2	Press <i>selection key</i>	'-'80.00	'-'80.0	'Minus' starts flashing 3 rd digit cannot show
1-3	Press <i>adjusting key</i>	80.0	80.0	Adjustable + / - sign
1-4	Press <i>selection key</i>	'8'0.0	'8'0.0	Hundreds digit flash, adjustable
1-5	Press <i>selection key</i>	8'0'.0	8'0'.0	Flash and adjustable
1-6	Press <i>selection key</i>	80. '0'	80. '0'	Flash and adjustable
2-1	Press <i>selection key</i>	LS	-20.0	Do not adjust - use function key Need adjust –use selection key
2-2	Press <i>selection key</i>	'-'20.0	'-'20.0	Minus[-] starts flashing , The 3 rd digit cannot display
2-3	Press <i>adjusting key</i>	20.0	20.0	Adjustable + /- sign
2-4	Press <i>adjusting key</i>	'2'0.0	'2'0.0	Flash and adjustable
2-5	Press <i>adjusting key</i>	2'0'.0	2'0'.0	Flash and adjustable
2-6	Press <i>adjusting key</i>	20. '0'	20. '0'	Flash and adjustable
2-7	Press <i>adjusting key</i>	RH	00.0	Do not adjust use <i>function key</i> for function option, want to adjust , same above action
2-8	Press <i>adjusting key</i>	RL	00.0	Do not adjust use <i>function key</i> for function option, want to adjust , same above action
2-9	Press <i>adjusting key</i>	OF	00.0	Do not adjust use <i>function key</i> for function option, want to adjust, press <i>selection key</i>
3-0	Press <i>adjusting key</i>			Recover normally show